


## Air Hose

### Quick-Fix™

- One package will repair two damaged 3/8" rubber air brake lines.
- Available with 3/8" or 1/2" male fittings  
\* For use with 3/8" rubber hose only
- Includes installation tool.
- Pre-applied thread sealant.
- Packaged in point of purchase display pack.
- Meets DOT 106 SAE J1402 requirements.

Sloan No.	Description
431402	Individual pack 3/8" fittings (2 assemblies)
431402-12	Box of (12) 3/8" individual packs
431402-100	100 pcs. 3/8" bulk unpackaged (no tool)
431403	Individual pack 1/2" fittings (2 assemblies)
431403-12	Box of (12) 1/2" individual packs
431403-100	100 pcs. 1/2" bulk unpackaged (no tool)
431405	Display with (12) 3/8" individual packs
431405D	Quick-fix display only
431406	Display with (12) 1/2" individual packs

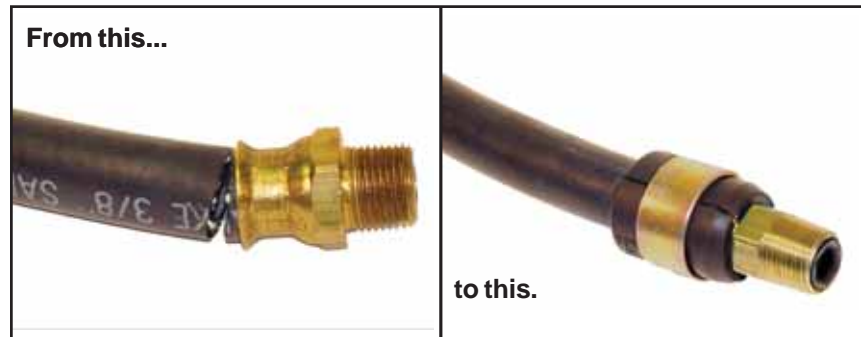

**Quick-Fix Display Rack**  
holds 12 Quick-Fix packages



1. Trim hose end. Place one half of plastic case on hose, flush with lock groove.



2. Insert threaded fitting into lock groove.



3. Position remaining plastic case piece over assembly



4. Slide assembly ring to lock position.



5. Using the supplied wrench, insert the greased lock stem, push and turn until flush inside the fitting.



6. Finished assembly is now ready for installation